## Lenovo Service Center - Lenovo Service Centers Contacts Generated: 18 August, 2025, 00:21

4. start laptop normally

Lenovo Ideapad Iaptop doesn't start Posted by Ienovoadmin - 06 Jan 2017 06:38
Hi,
Try ths 1
1. remove battery and unplug from wall
2. press start button and hold down for 60 seconds
3. install battery and power cord