

## Why does my Lenovo S21e-20 laptop device turn on and off by itself?

Posted by lenovoadmin - 06 Jan 2017 08:38

---

This problem can be caused by multiple issues. Your device's RAM may be loose and need to be reseated, or it may need to be replaced. If this solution does not help, then your motherboard has failed and needs to be replaced. Please refer to the appropriate replacement guides to resolve this issue.

=====