

## Why won't my laptop boot up?

Posted by lenovoadmin - 06 Jan 2017 08:54

---

Check the power supply and make sure that the battery has charge. If you're not sure how to do this, remove the battery and use the main charger that came with your laptop. Also make sure the charger has the correct voltage and current for your laptop. Typically a laptop voltage requires 16-20V.

=====